

Item	Description	5180V2	5*80V2	7180V2	7*80V2
1	Compressor w/ Flywheel	HPV05A	HPV05A	HPV05A	HPV05A
2	Discharge Tube	TU-3/4-CU (2.5ft)	TU-3/4-CU (2.5ft)	TU-3/4-CU (2.5ft)	TU-3/4-CU (2.5ft)
	Flare Fitting/Elbow	49-12E & 40-12	49-12E & 40-12	49-12E & 40-12	49-12E & 40-12
3	Pressure Gauge (Tank)	PG200-2.5R	PG200-2.5R	PG200-2.5R	PG200-2.5R
4	Outlet Valve	BV3/4MF	BV3/4MF	BV3/4MF	BV3/4MF
5	Air Receiver	80VE20X48-B	80VE20X48-B	80VE20X48-B	80VE20X48-B
6	Drain Cock	DC1/4	DC1/4	DC1/4	DC1/4
7	V-Belt	A73 (2)	A73 (2)	A73 (2)	A73 (2)
8	Belt Guard	BG80GAL	BG80GAL	BG80GAL	BG80GAL
9	Motor - 1 Phase, 208/230Volt	EM05.0-18-10	N/A	EM07.5-18-10	N/A
	- 3 Phase, 208/230-460V	N/A	EM05.0-18-30	N/A	EM07.5-18-30
	- 3 Phase, 575Volt	N/A	EM05.0-18-50	N/A	EM07.5-18-50
10	Check Valve	P7575ST	P7575ST	P7575ST	P7575ST
11	Pressure Switch	21UCBDB-170	21UCBDB-170	21UCBDB-170	21UCBDB-170
12	Pulley - Motor	2MAL92	2MAL92	2MAL92	2MAL92
13	Hub or Bushing	LX11/8	LX11/8	LX13/8	LX13/8
14	Unloader Tube w/ Fittings	TU-1/4-CU & 68-4A	TU-1/4-CU & 68-4A	TU-1/4-CU & 68-4A	TU-1/4-CU & 68-4A
15	Safety Valve	PSV1/4-200	PSV1/4-200	PSV1/4-200	PSV1/4-200
	Eagle Compressor Oil	EAOIL10	EAOIL10	EAOIL10	EAOIL10

\* For 5180V2-CS - substitute part #11 for CS-24/30A

\* For 5380V2-CS4 - substitute part #11 for CS-6.3/10A

\* For 7180V2-MS - add Magnetic Starter part # MS60981104

\* For 7380V2-CS4 - substitute part #11 for CS-10/16A

\* For 5380V2-CS2 - substitute part #11 for CS-10/16A

 
 
\* For 5580V2-CS - substitute part #11 for CS-6.3/10A

\* For 7380V2-CS2 - substitute part #11 for CS-20/24A

\* For 7580V2-CS - substitute part #11 for CS-6.3/10A

### MODELS


5180V2	7180V2
5180V2-CS	7180V2-MS
5380V2	7380V2
5380V2-CS2	7380V2-CS2
5380V2-CS4	7380V2-CS4
5580V2	7580V2
5580V2-CS	7580V2-CS

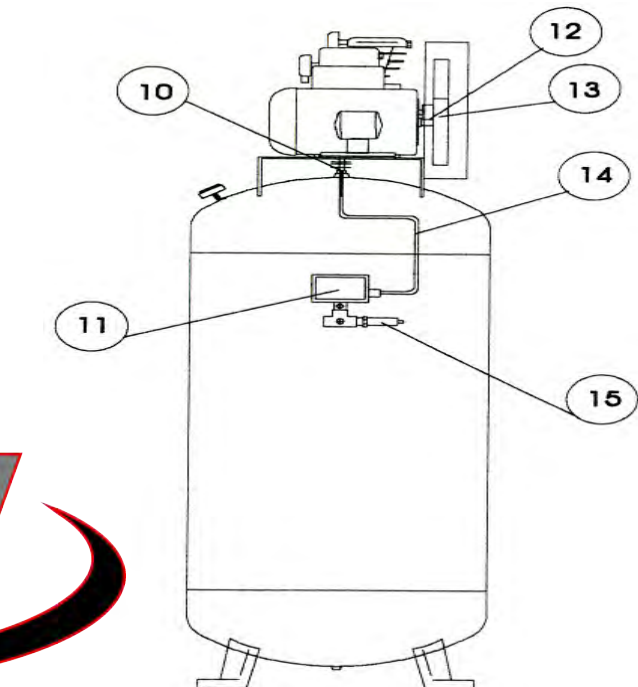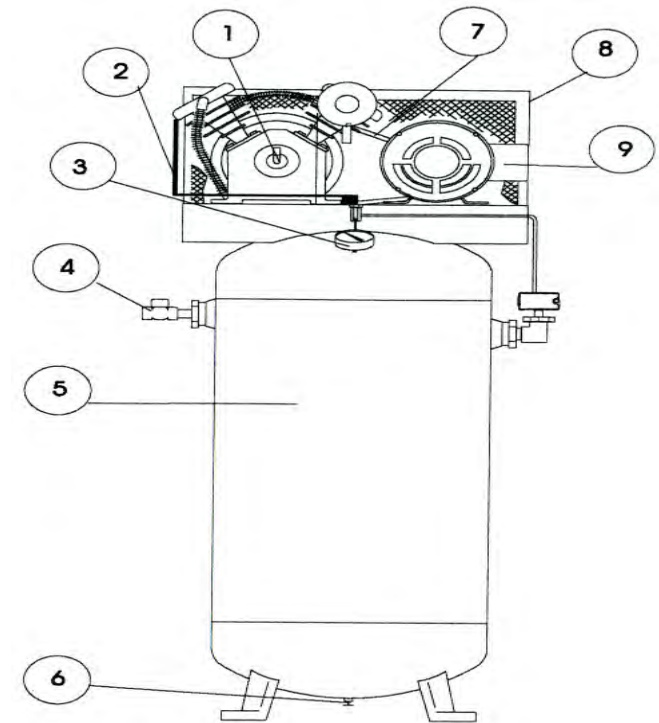


Lynco Products Inc  
 # 114, 1220 - 28 STREET N.E  
 CALGARY, AB T2A 6A2  
 403-250-3600 / 1-877-249-3600  
 sales@lyncoopro.com / www.lyncoopro.com

### Eagle Air Compressor part breakdown sheet - 7580V2-CS

 Item	Description	7580V2-CS
1	Compressor w/ Flywheel	HPV05A
2	Discharge Tube	TU-3/4-CU (2.5ft)
	Flare Fitting/Elbow	49-12E & 40-12
3	Pressure Gauge (Tank)	PG200-2.5R
4	Outlet Valve	BV3/4MF
5	Air Receiver	80VE20X48-B
6	Drain Cock	DC1/4
7	V-Belt	A73 (2)
8	Belt Guard	BG80GAL
9	Motor - 1 Phase, 208/230Volt	N/A
	- 3 Phase, 208/230-460V	EM07.5-18-30
	- 3 Phase, 575Volt	EM07.5-18-50
10	Check Valve	P7575ST
11	Pressure Switch	CS-6.3/10A
12	Pulley - Motor	2MAL92
13	Hub or Bushing	LX13/8
14	Unloader Tube w/ Fittings	TU-1/4-CU & 68-4A
15	Safety Valve	PSV1/4-200
16	Magnetic Starter	MS
	Eagle Compressor Oil	EAOIL10

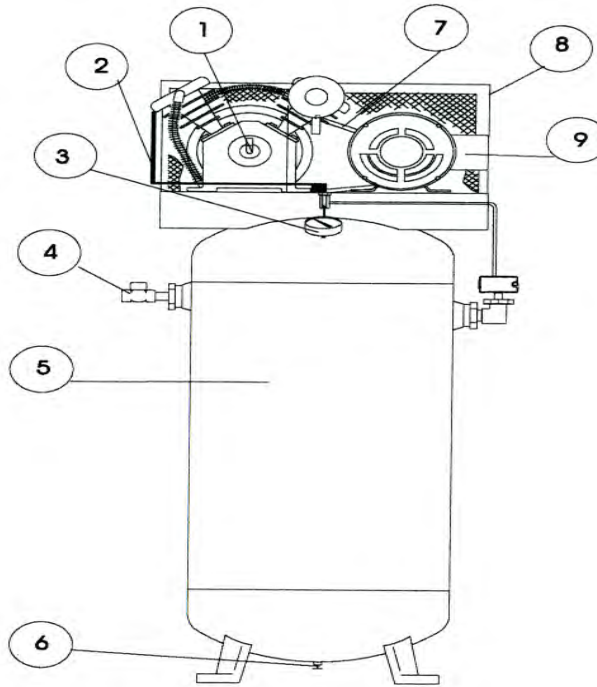


**7580V2-CS**

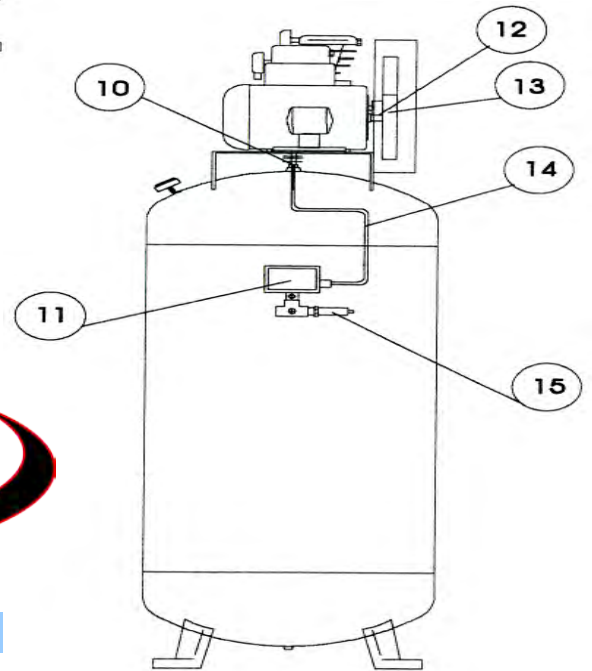 


Call 1-800-551-2406 for the Customer Service Department.

### Eagle Air Compressor part breakdown sheet - 7380V2-CS4

 Item	Description	7380V2-CS4
1	Compressor w/ Flywheel	HPV05A
2	Discharge Tube	TU-3/4-CU (2.5ft)
	Flare Fitting/Elbow	49-12E & 40-12
3	Pressure Gauge (Tank)	PG200-2.5R
4	Outlet Valve	BV3/4MF
5	Air Receiver	80VE20X48-B
6	Drain Cock	DC1/4
7	V-Belt	A73 (2)
8	Belt Guard	BG80GAL
9	Motor - 1 Phase, 208/230Volt	N/A
	- 3 Phase, 208/230-460V	EM07.5-18-30
	- 3 Phase, 575Volt	EM07.5-18-50
10	Check Valve	P7575ST
11	Pressure Switch	CS-10/16A
12	Pulley - Motor	2MAL92
13	Hub or Bushing	LX13/8
14	Unloader Tube w/ Fittings	TU-1/4-CU & 68-4A
15	Safety Valve	PSV1/4-200
16	Magnetic Starter	MS
	Eagle Compressor Oil	EAOIL10

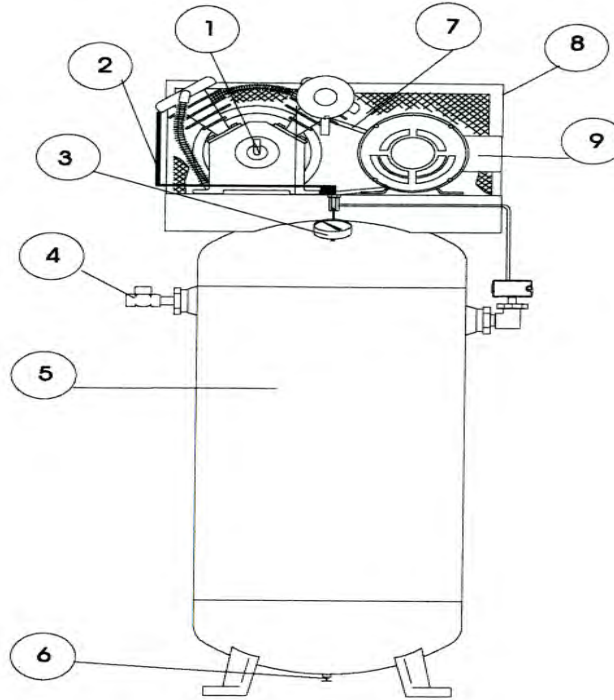


**7380V2-CS4**

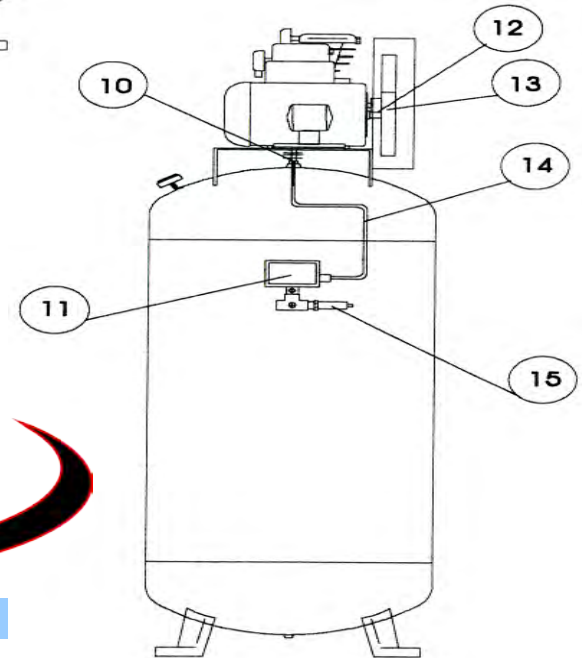 


Call 1-800-551-2406 for the Customer Service Department.

### Eagle Air Compressor part breakdown sheet - 7380V2-CS2

 Item	Description	7380V2-CS2
1	Compressor w/ Flywheel	HPV05A
2	Discharge Tube	TU-3/4-CU (2.5ft)
	Flare Fitting/Elbow	49-12E & 40-12
3	Pressure Gauge (Tank)	PG200-2.5R
4	Outlet Valve	BV3/4MF
5	Air Receiver	80VE20X48-B
6	Drain Cock	DC1/4
7	V-Belt	A73 (2)
8	Belt Guard	BG80GAL
9	Motor - 1 Phase, 208/230Volt	N/A
	- 3 Phase, 208/230-460V	EM07.5-18-30
	- 3 Phase, 575Volt	EM07.5-18-50
10	Check Valve	P7575ST
11	Pressure Switch	CS-20/24A
12	Pulley - Motor	2MAL92
13	Hub or Bushing	LX13/8
14	Unloader Tube w/ Fittings	TU-1/4-CU & 68-4A
15	Safety Valve	PSV1/4-200
16	Magnetic Starter	MS
	Eagle Compressor Oil	EAOIL10

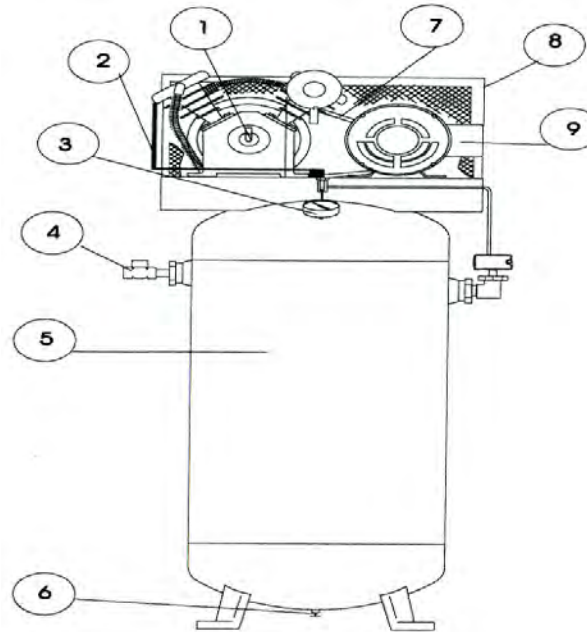


**7380V2-CS2**

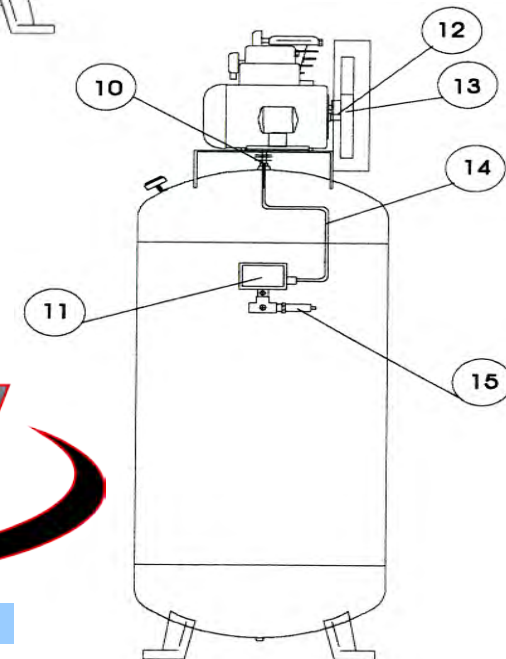 

Call 1-800-551-2406 for the Customer Service Department.

### Eagle Air Compressor part breakdown sheet - 7180V2-MS

 
Item	Description	7180V2-MS
1	Compressor w/ Flywheel	HPV05A
2	Discharge Tube	TU-3/4-CU (2.5ft)
	Flare Fitting/Elbow	49-12E & 40-12
3	Pressure Gauge (Tank)	PG200-2.5R
4	Outlet Valve	BV3/4MF
5	Air Receiver	80VE20X48-B
6	Drain Cock	DC1/4
7	V-Belt	A73 (2)
8	Belt Guard	BG80GAL
9	Motor - 1 Phase, 208/230Volt	N/A
	- 3 Phase, 208/230-460V	EM07.5-18-30
	- 3 Phase, 575Volt	EM07.5-18-50
10	Check Valve	P7575ST
11	Pressure Switch	3BEHD-170
12	Pulley - Motor	2MAL92
13	Hub or Bushing	LX13/8
14	Unloader Tube w/ Fittings	TU-1/4-CU & 68-4A
15	Safety Valve	PSV1/4-200
16	Magnetic Starter	MS
	Eagle Compressor Oil	EAOIL10

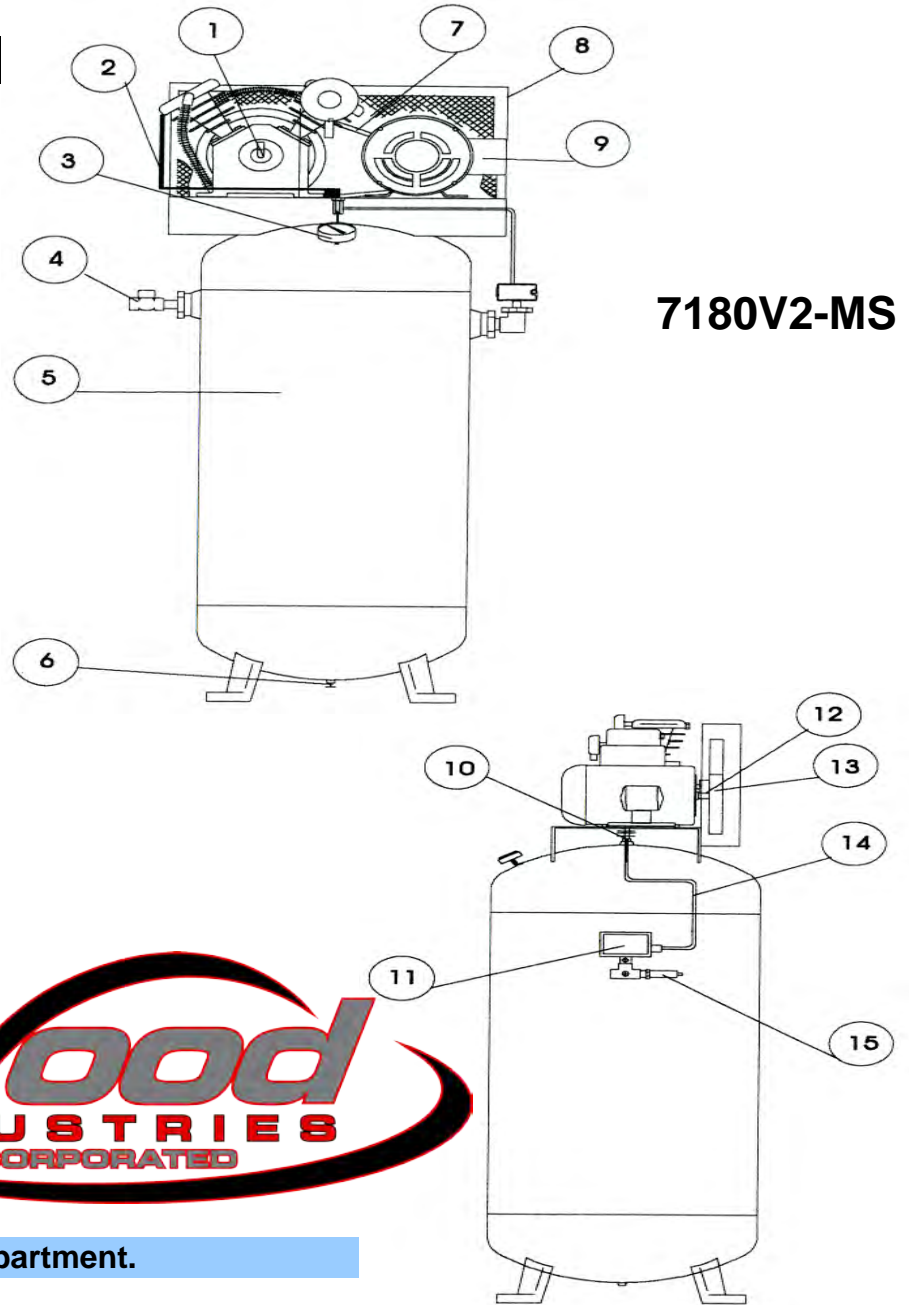


Call 1-800-551-2406 for the Customer Service Department.

### Eagle Air Compressor part breakdown sheet - 5580V2-CS

 Item	Description	5580V2-CS
1	Compressor w/ Flywheel	HPV05A
2	Discharge Tube	TU-3/4-CU (2.5ft)
	Flare Fitting/Elbow	49-12E & 40-12
3	Pressure Gauge (Tank)	PG200-2.5R
4	Outlet Valve	BV3/4MF
5	Air Receiver	80VE20X48-B
6	Drain Cock	DC1/4
7	V-Belt	A73 (2)
8	Belt Guard	BG80GAL
9	Motor - 1 Phase, 208/230Volt	N/A
	- 3 Phase, 208/230-460V	EM05.0-18-30
	- 3 Phase, 575Volt	EM05.0-18-50
10	Check Valve	P7575ST
11	Pressure Switch	CS-6.3/10A
12	Pulley - Motor	2MAL92
13	Hub or Bushing	LX11/8
14	Unloader Tube w/ Fittings	TU-1/4-CU & 68-4A
15	Safety Valve	PSV1/4-200
	Eagle Compressor Oil	EAOIL10

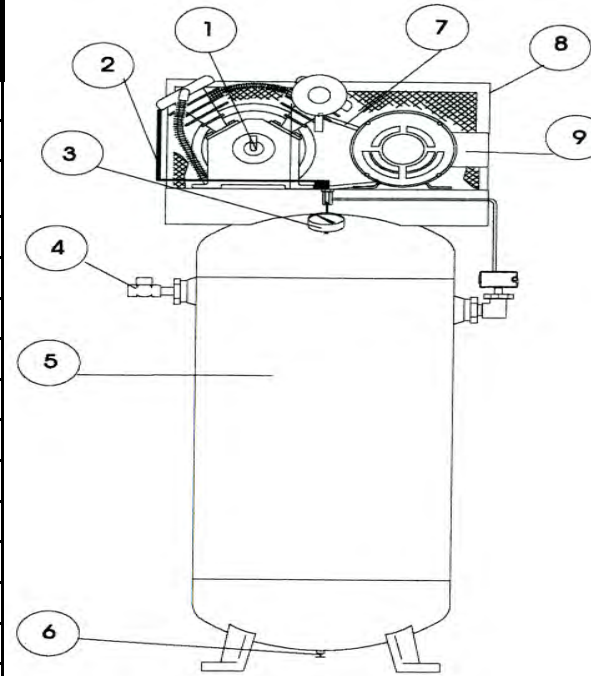


**5580V2-CS**

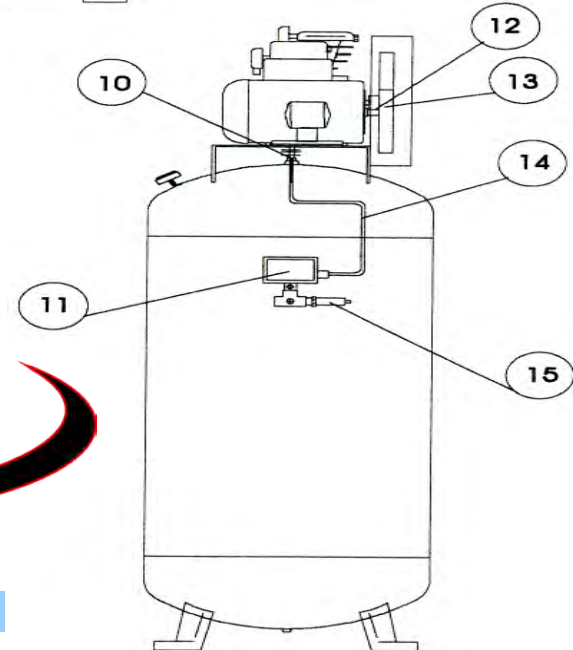 


Call 1-800-551-2406 for the Customer Service Department.

**Eagle Air Compressor part breakdown sheet - 5380V2-CS4**

 Item	Description	5380V2-CS
1	Compressor w/ Flywheel	HPV05A
2	Discharge Tube	TU-3/4-CU (2.5ft)
	Flare Fitting/Elbow	49-12E & 40-12
3	Pressure Gauge (Tank)	PG200-2.5R
4	Outlet Valve	BV3/4MF
5	Air Receiver	80VE24X48-B
6	Drain Cock	240-B
7	V-Belt	A73 (2)
8	Belt Guard	BG80GAL
9	Motor - 1 Phase, 208/230Volt	N/A
	- 3 Phase, 208/230-460V	EM05.0-18-30
	- 3 Phase, 575Volt	EM05.0-18-50
10	Check Valve	P7575ST
11	Pressure Switch	CS-6.3/10A
12	Pulley - Motor	2MAL92
13	Hub or Bushing	LX11/8
14	Unloader Tube w/ Fittings	TU-1/4-CU & 68-4A
15	Safety Valve	PSV1/4-200
	Eagle Compressor Oil	EAOIL10

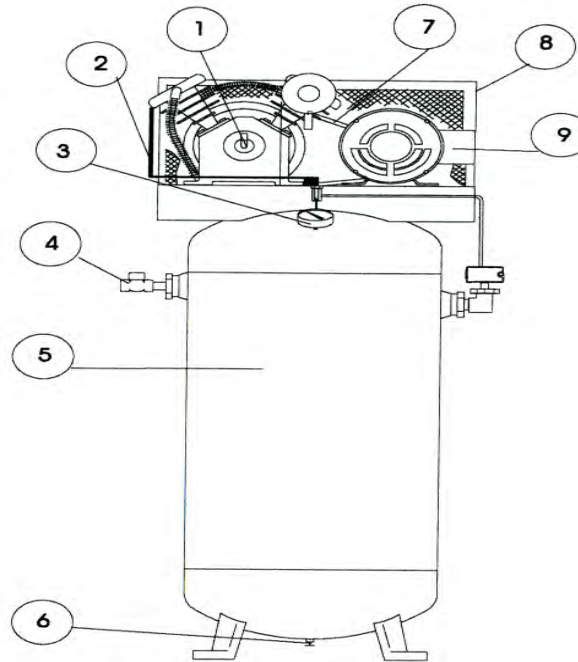


**5380V2-CS4**

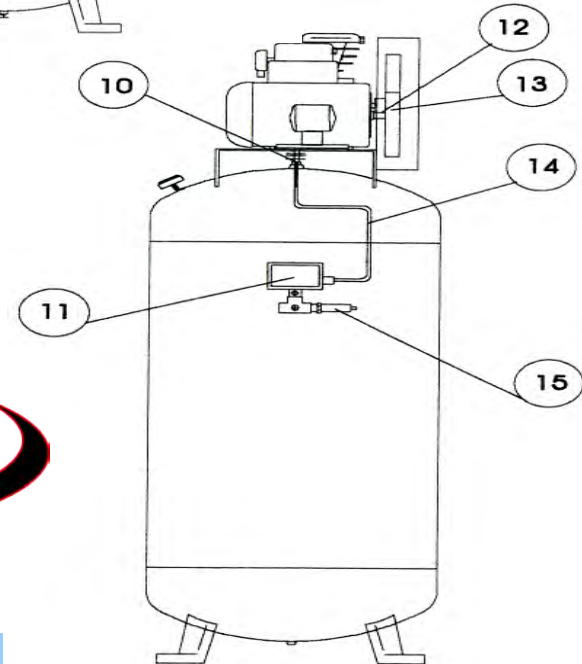 


Call 1-800-551-2406 for the Customer Service Department.

### Eagle Air Compressor part breakdown sheet - 5380V2-CS2

 Item	Description	5380V2-CS2
1	Compressor w/ Flywheel	HPV05A
2	Discharge Tube	TU-3/4-CU (2.5ft)
	Flare Fitting/Elbow	49-12E & 40-12
3	Pressure Gauge (Tank)	PG200-2.5R
4	Outlet Valve	BV3/4MF
5	Air Receiver	80VE20X48-B
6	Drain Cock	DC1/4
7	V-Belt	A73 (2)
8	Belt Guard	BG80GAL
9	Motor - 1 Phase, 208/230Volt	N/A
	- 3 Phase, 208/230-460V	EM05.0-18-30
	- 3 Phase, 575Volt	EM05.0-18-50
10	Check Valve	P7575ST
11	Pressure Switch	CS-10/16A
12	Pulley - Motor	2MAL92
13	Hub or Bushing	LX11/8
14	Unloader Tube w/ Fittings	TU-1/4-CU & 68-4A
15	Safety Valve	PSV1/4-200
	Eagle Compressor Oil	EAOIL10

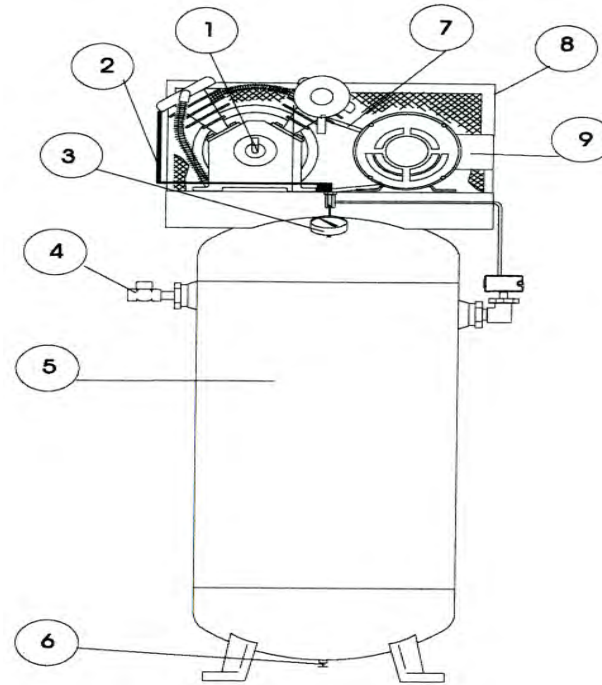

**5380V2-CS2**

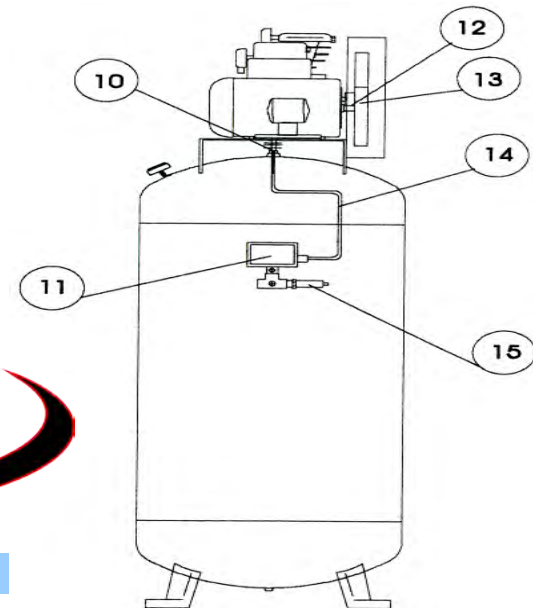 


Call 1-800-551-2406 for the Customer Service Department.




### Eagle Air Compressor part breakdown sheet - 5180V2-CS

 Item	Description	5180V2-CS
1	Compressor w/ Flywheel	HPV05A
2	Discharge Tube	TU-3/4-CU (2.5ft)
	Flare Fitting/Elbow	49-12E & 40-12
3	Pressure Gauge (Tank)	PG200-2.5R
4	Outlet Valve	BV3/4MF
5	Air Receiver	80VE20X48-B
6	Drain Cock	240-B
7	V-Belt	A73 (2)
8	Belt Guard	BG80GAL
9	Motor - 1 Phase, 208/230Volt	N/A
	- 3 Phase, 208/230-460V	EM05.0-18-30
	- 3 Phase, 575Volt	EM05.0-18-50
10	Check Valve	P7575ST
11	Pressure Switch	CS-24/30/A
12	Pulley - Motor	2MAL92
13	Hub or Bushing	LX11/8
14	Unloader Tube w/ Fittings	TU-1/4-CU & 68-4A
15	Safety Valve	PSV1/4-200
	Eagle Compressor Oil	EAOIL10

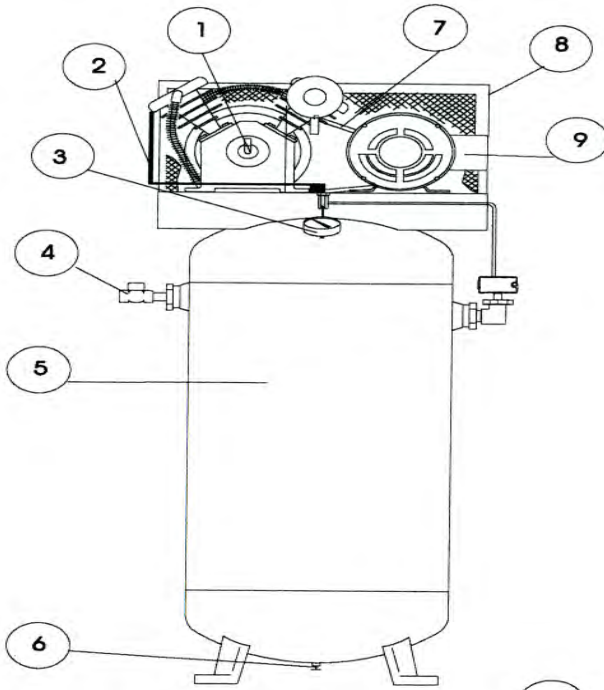

**5180V2-CS**

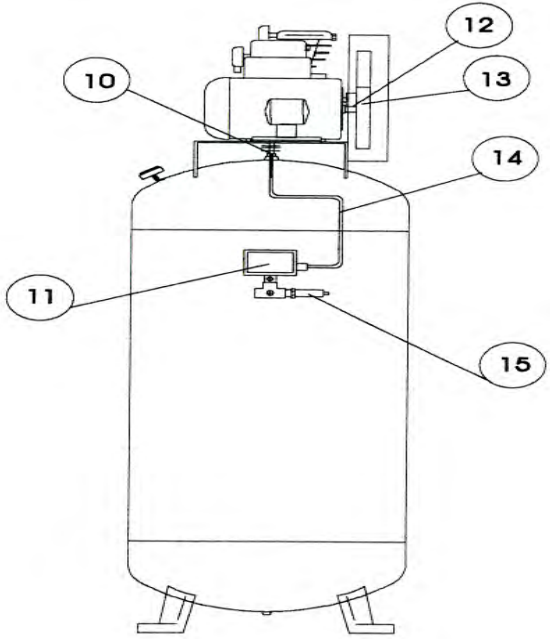 

Call 1-800-551-2406 for the Customer Service Department.